

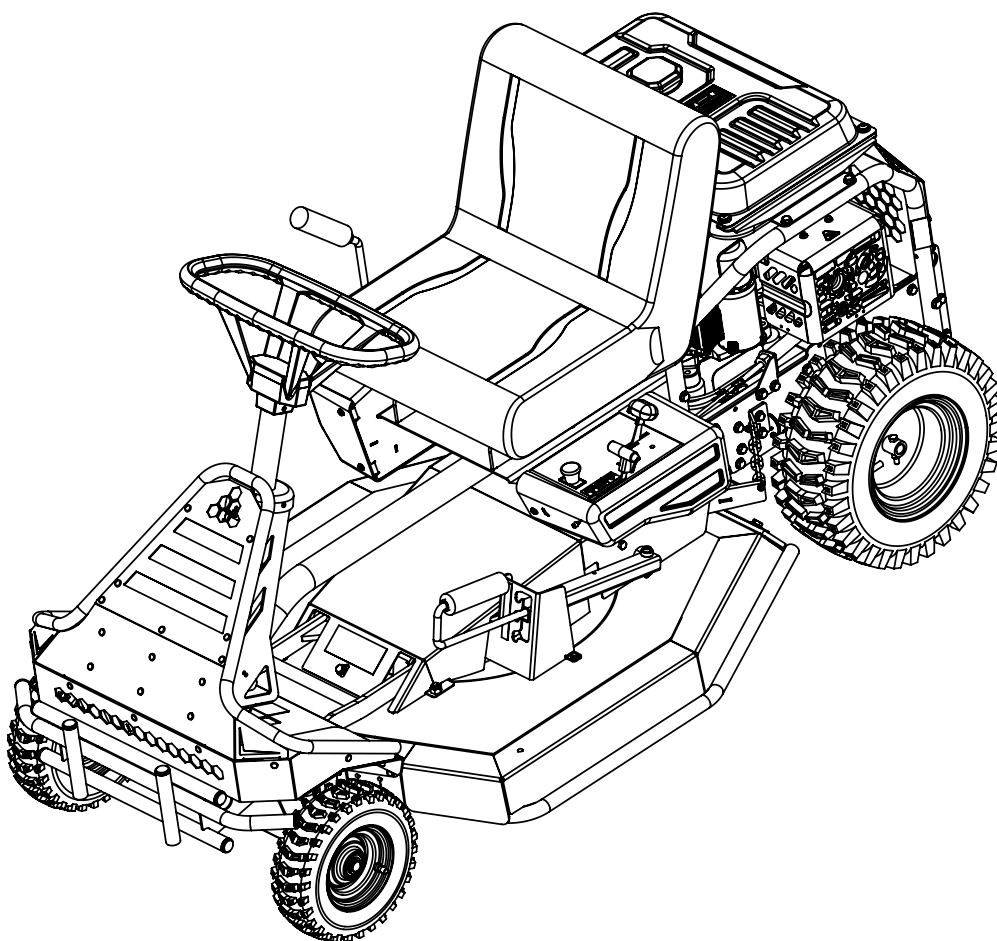



Pièces de rechange Spare parts list


440004****

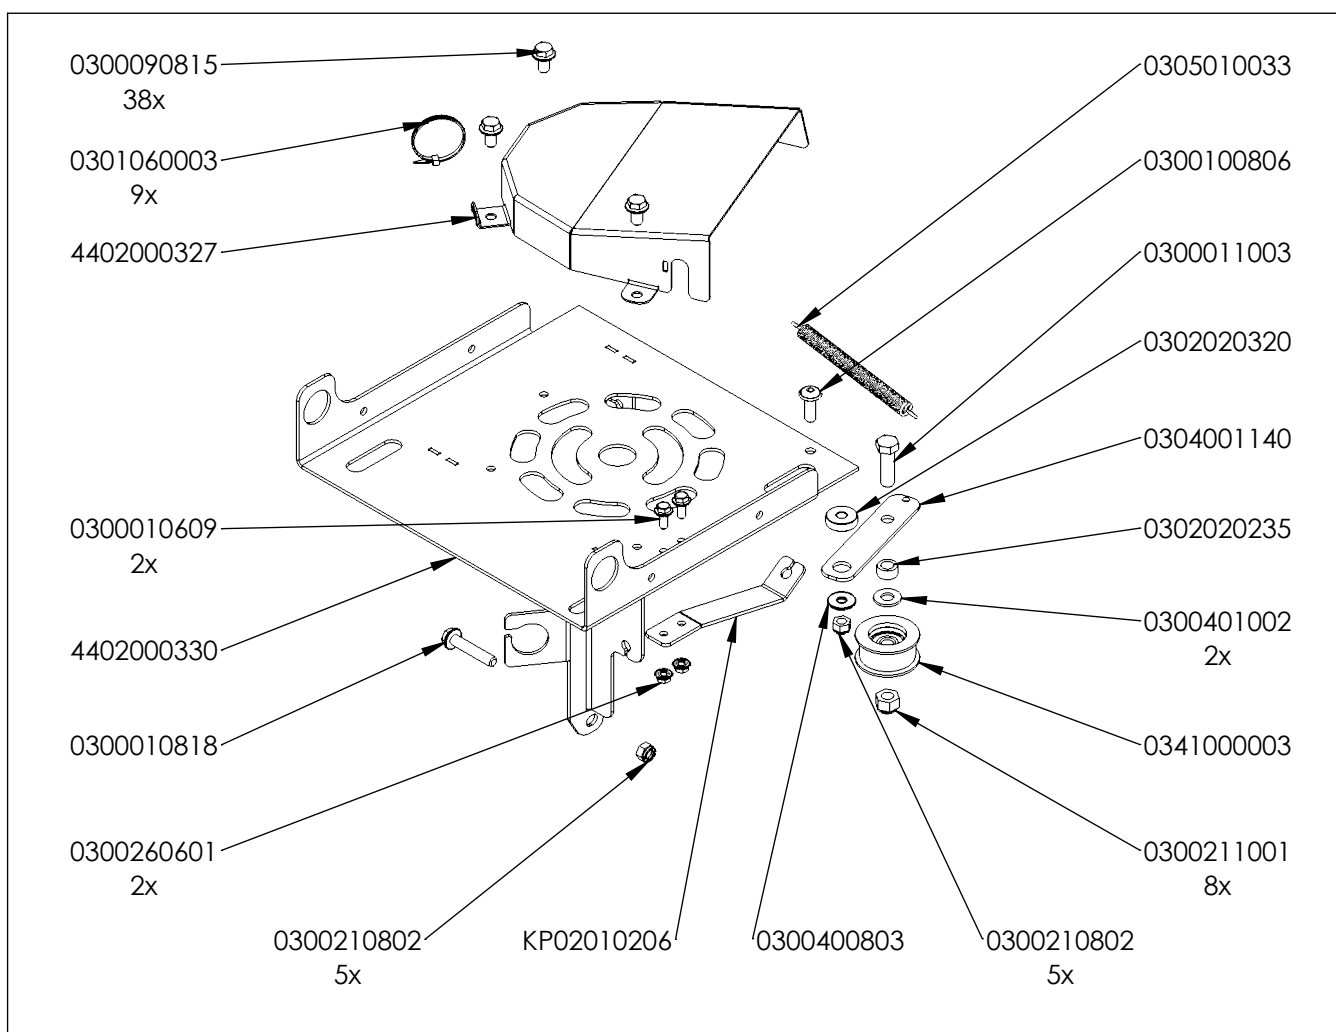




**DEBROUSSAILLEUSE FORESTIERE AUTOPORTEE
RIDE-ON FORESTRY BRUSHCUTTER**


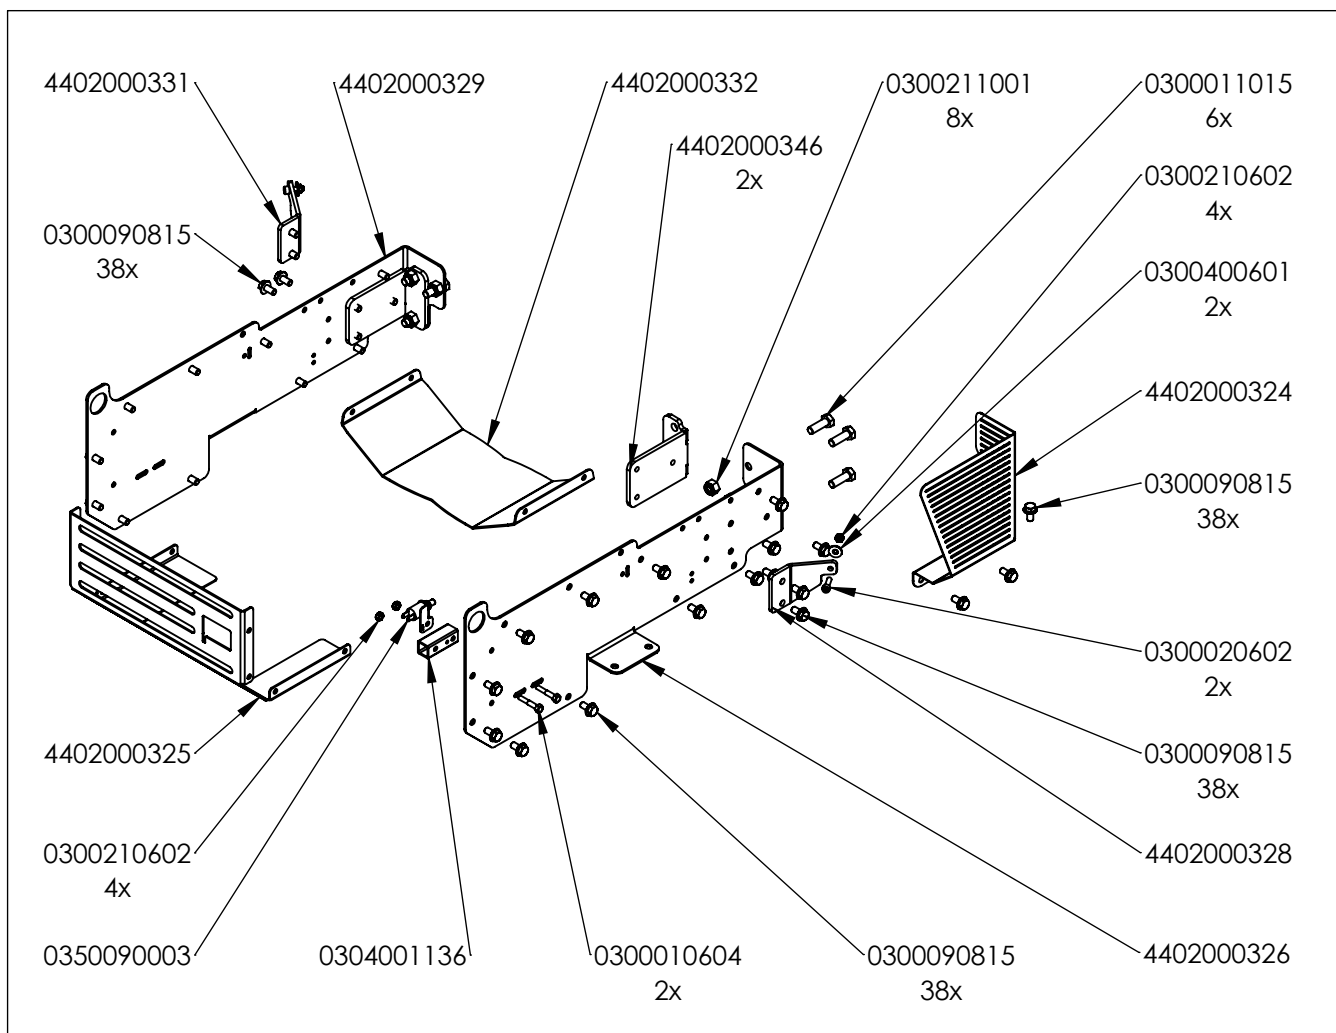


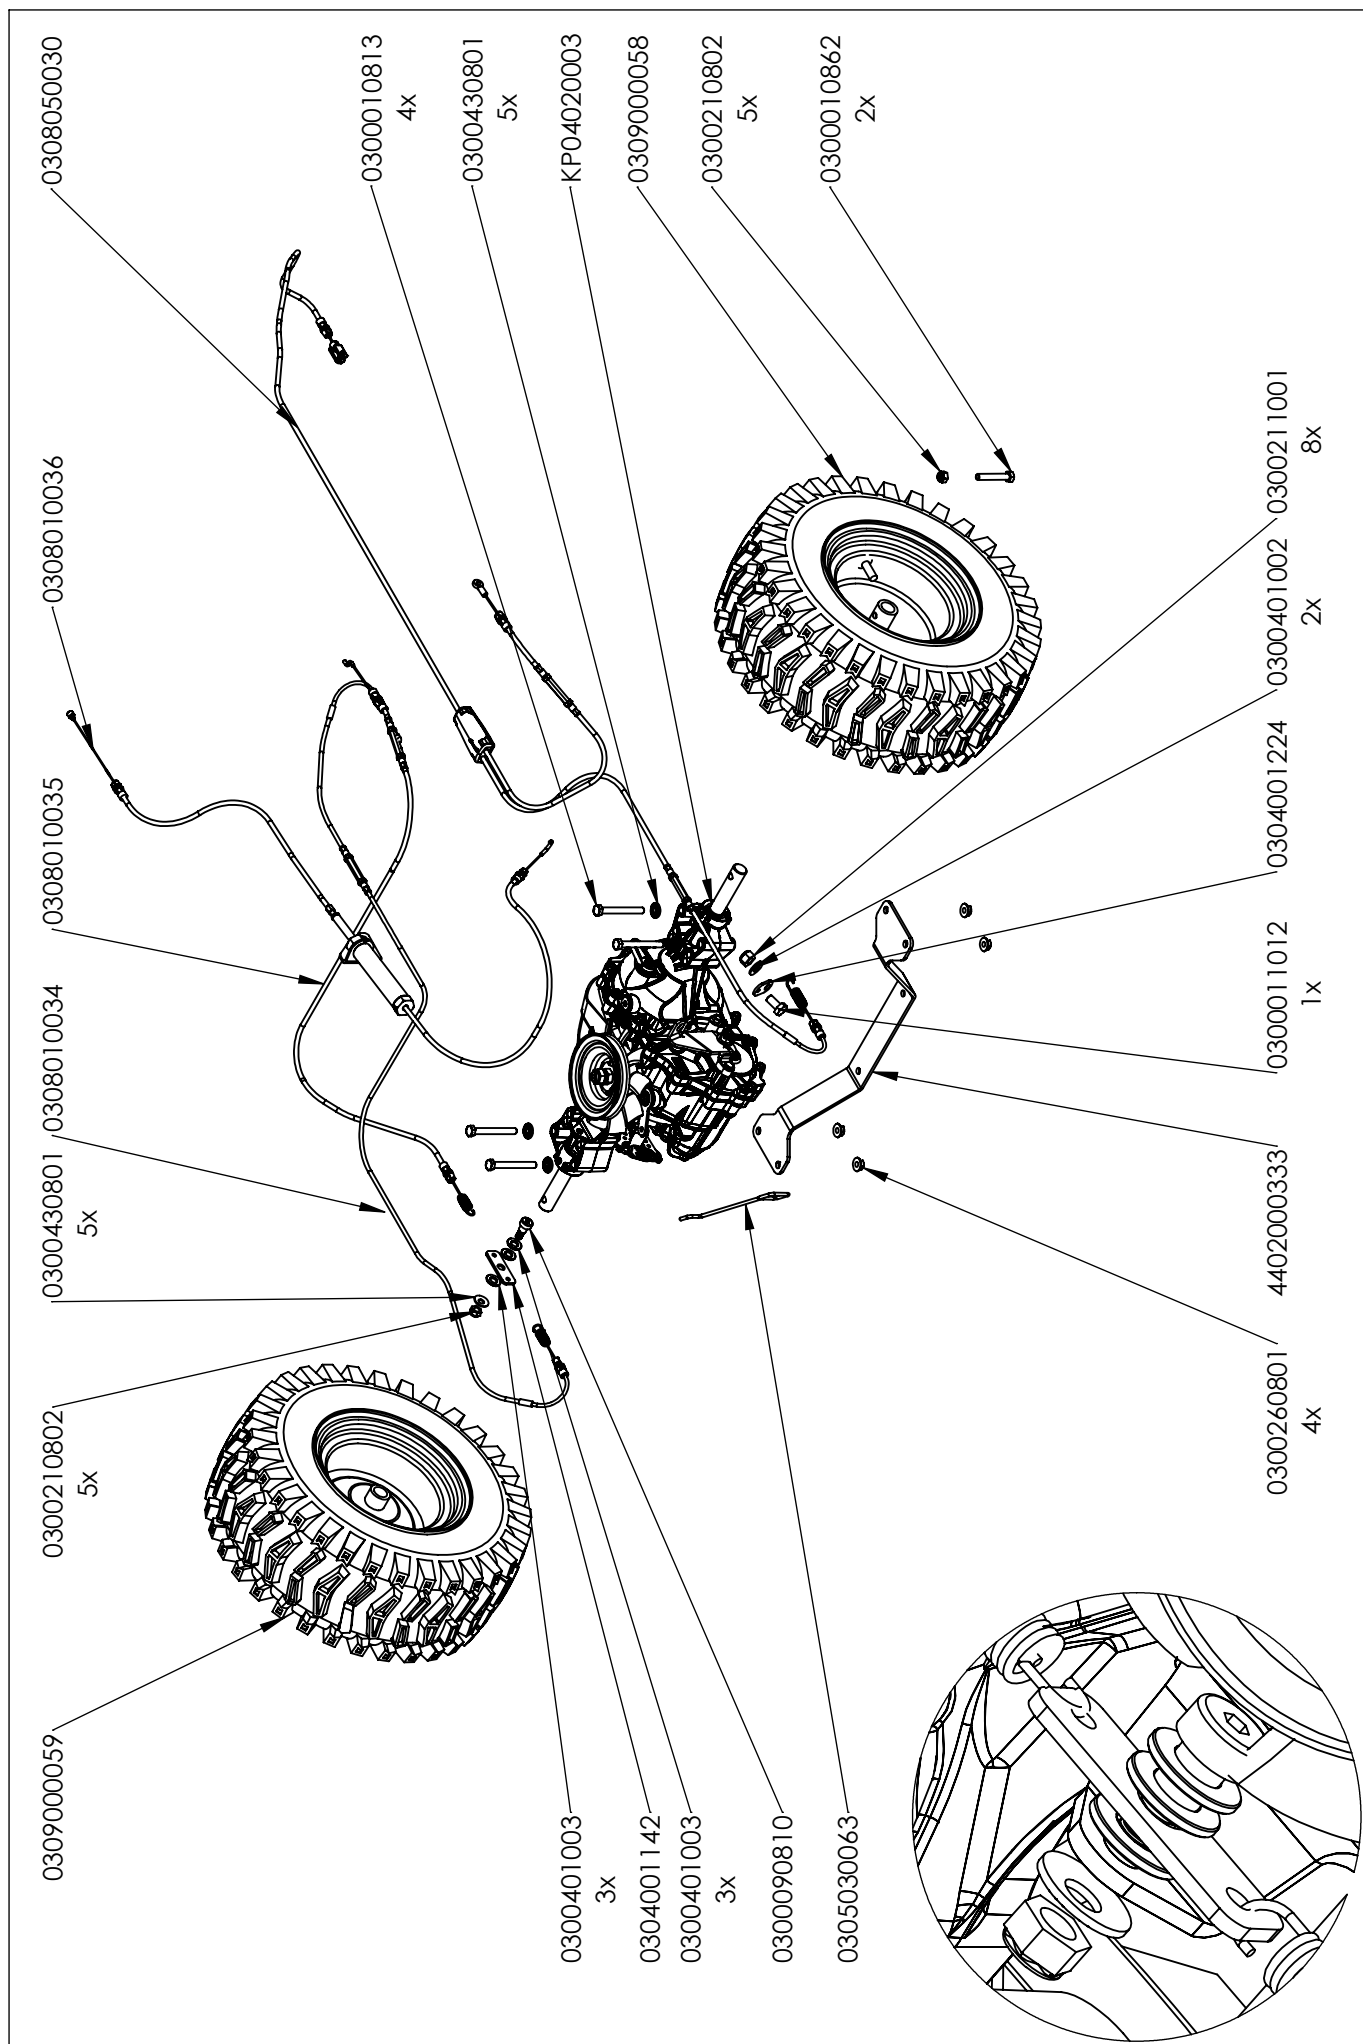

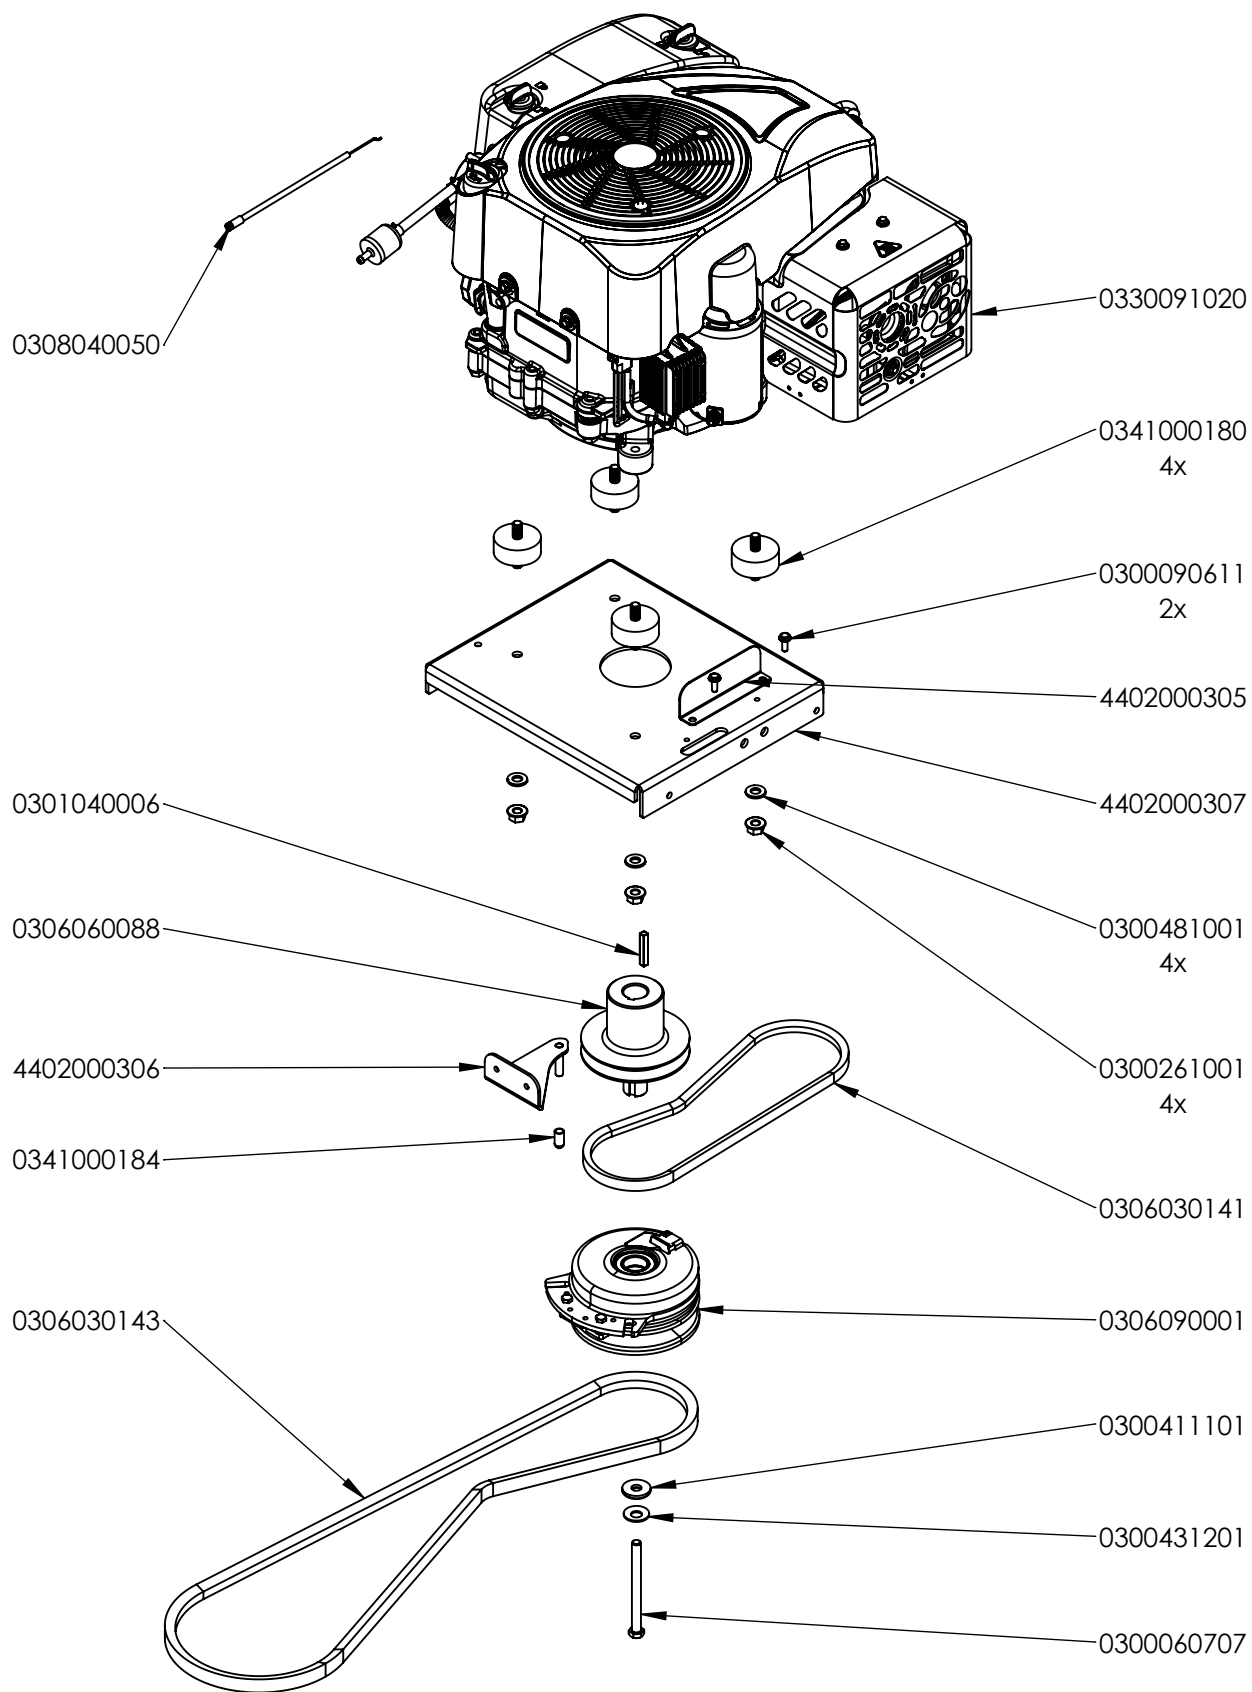

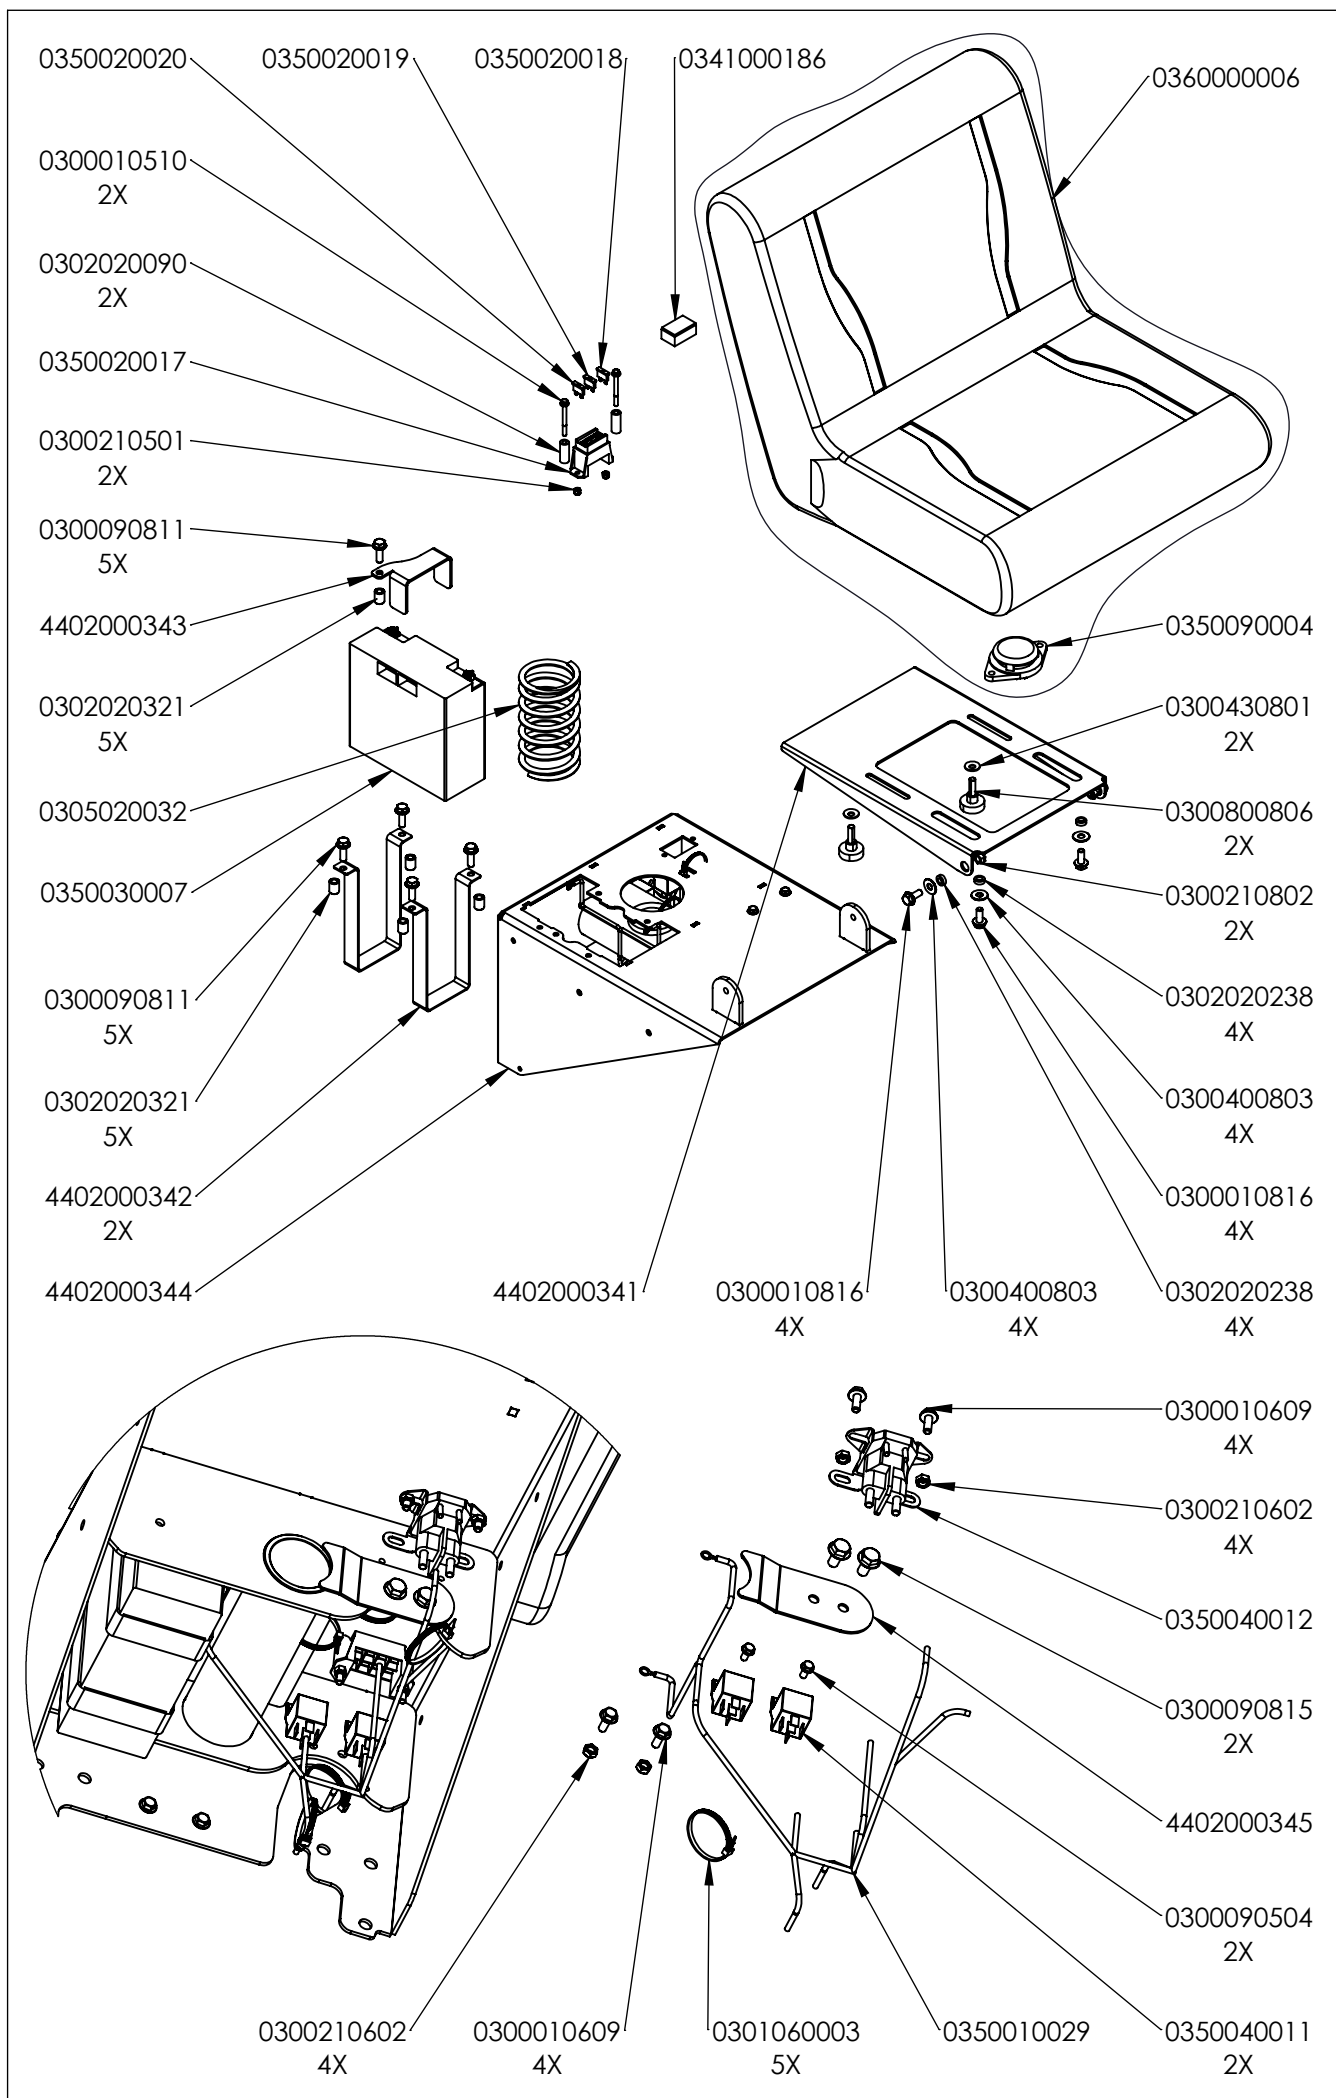

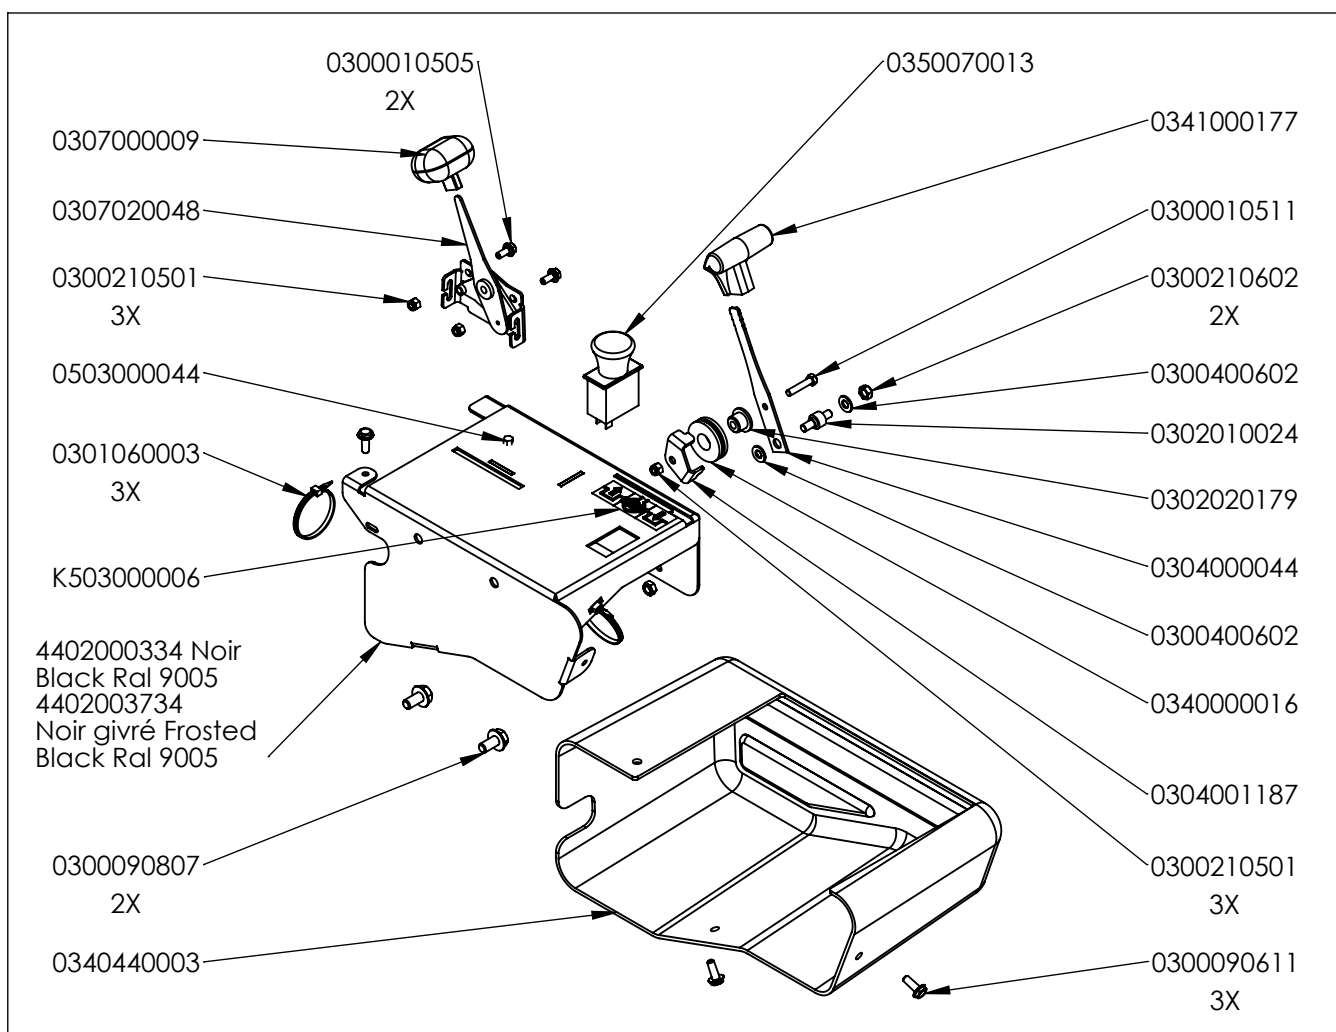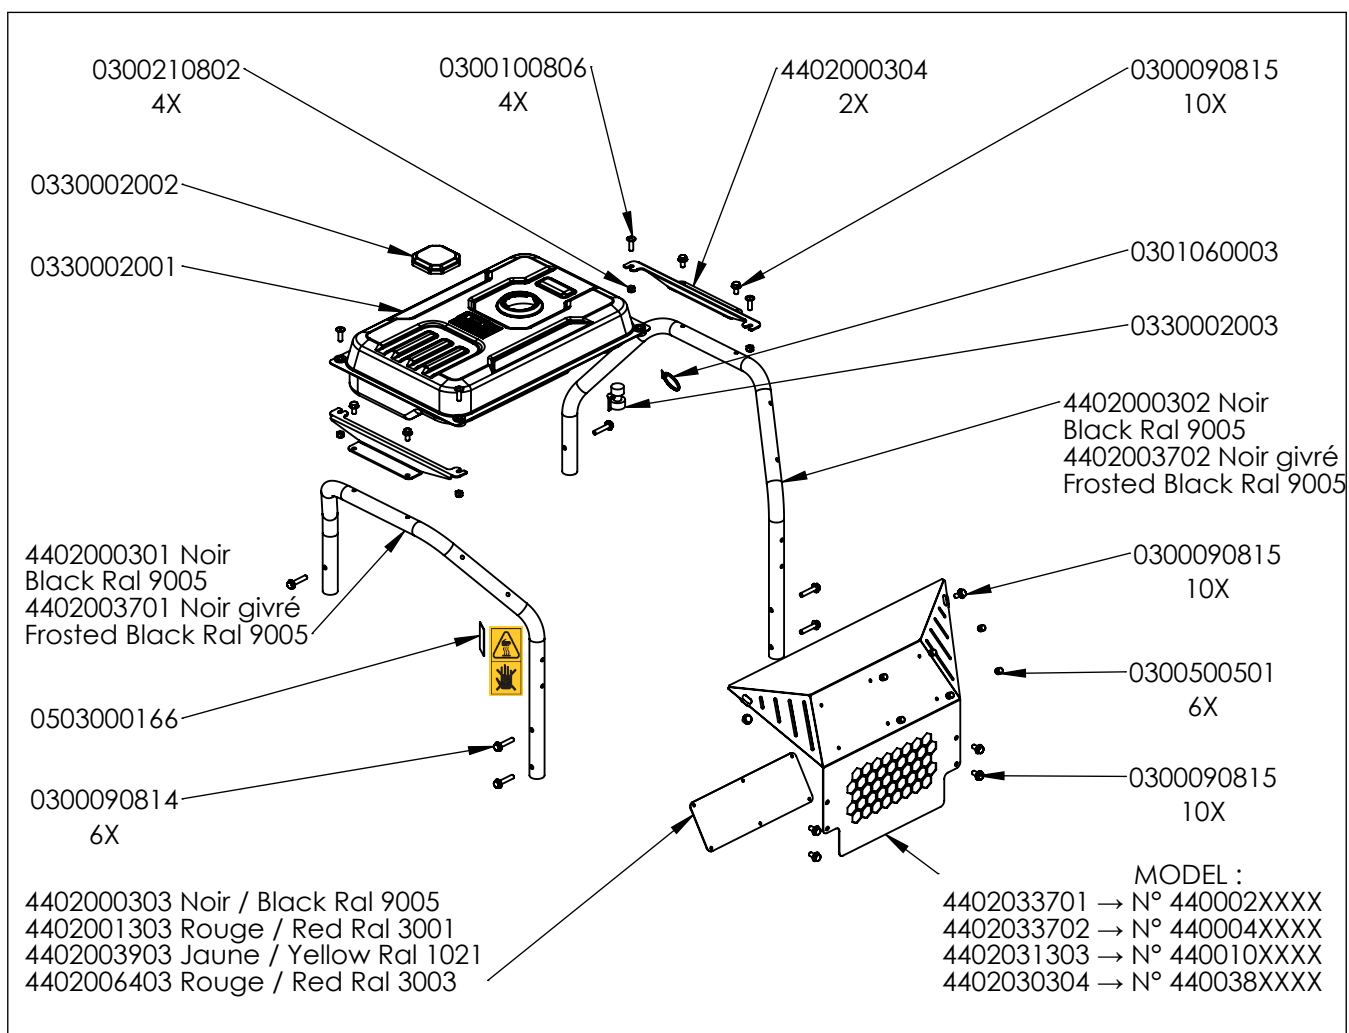

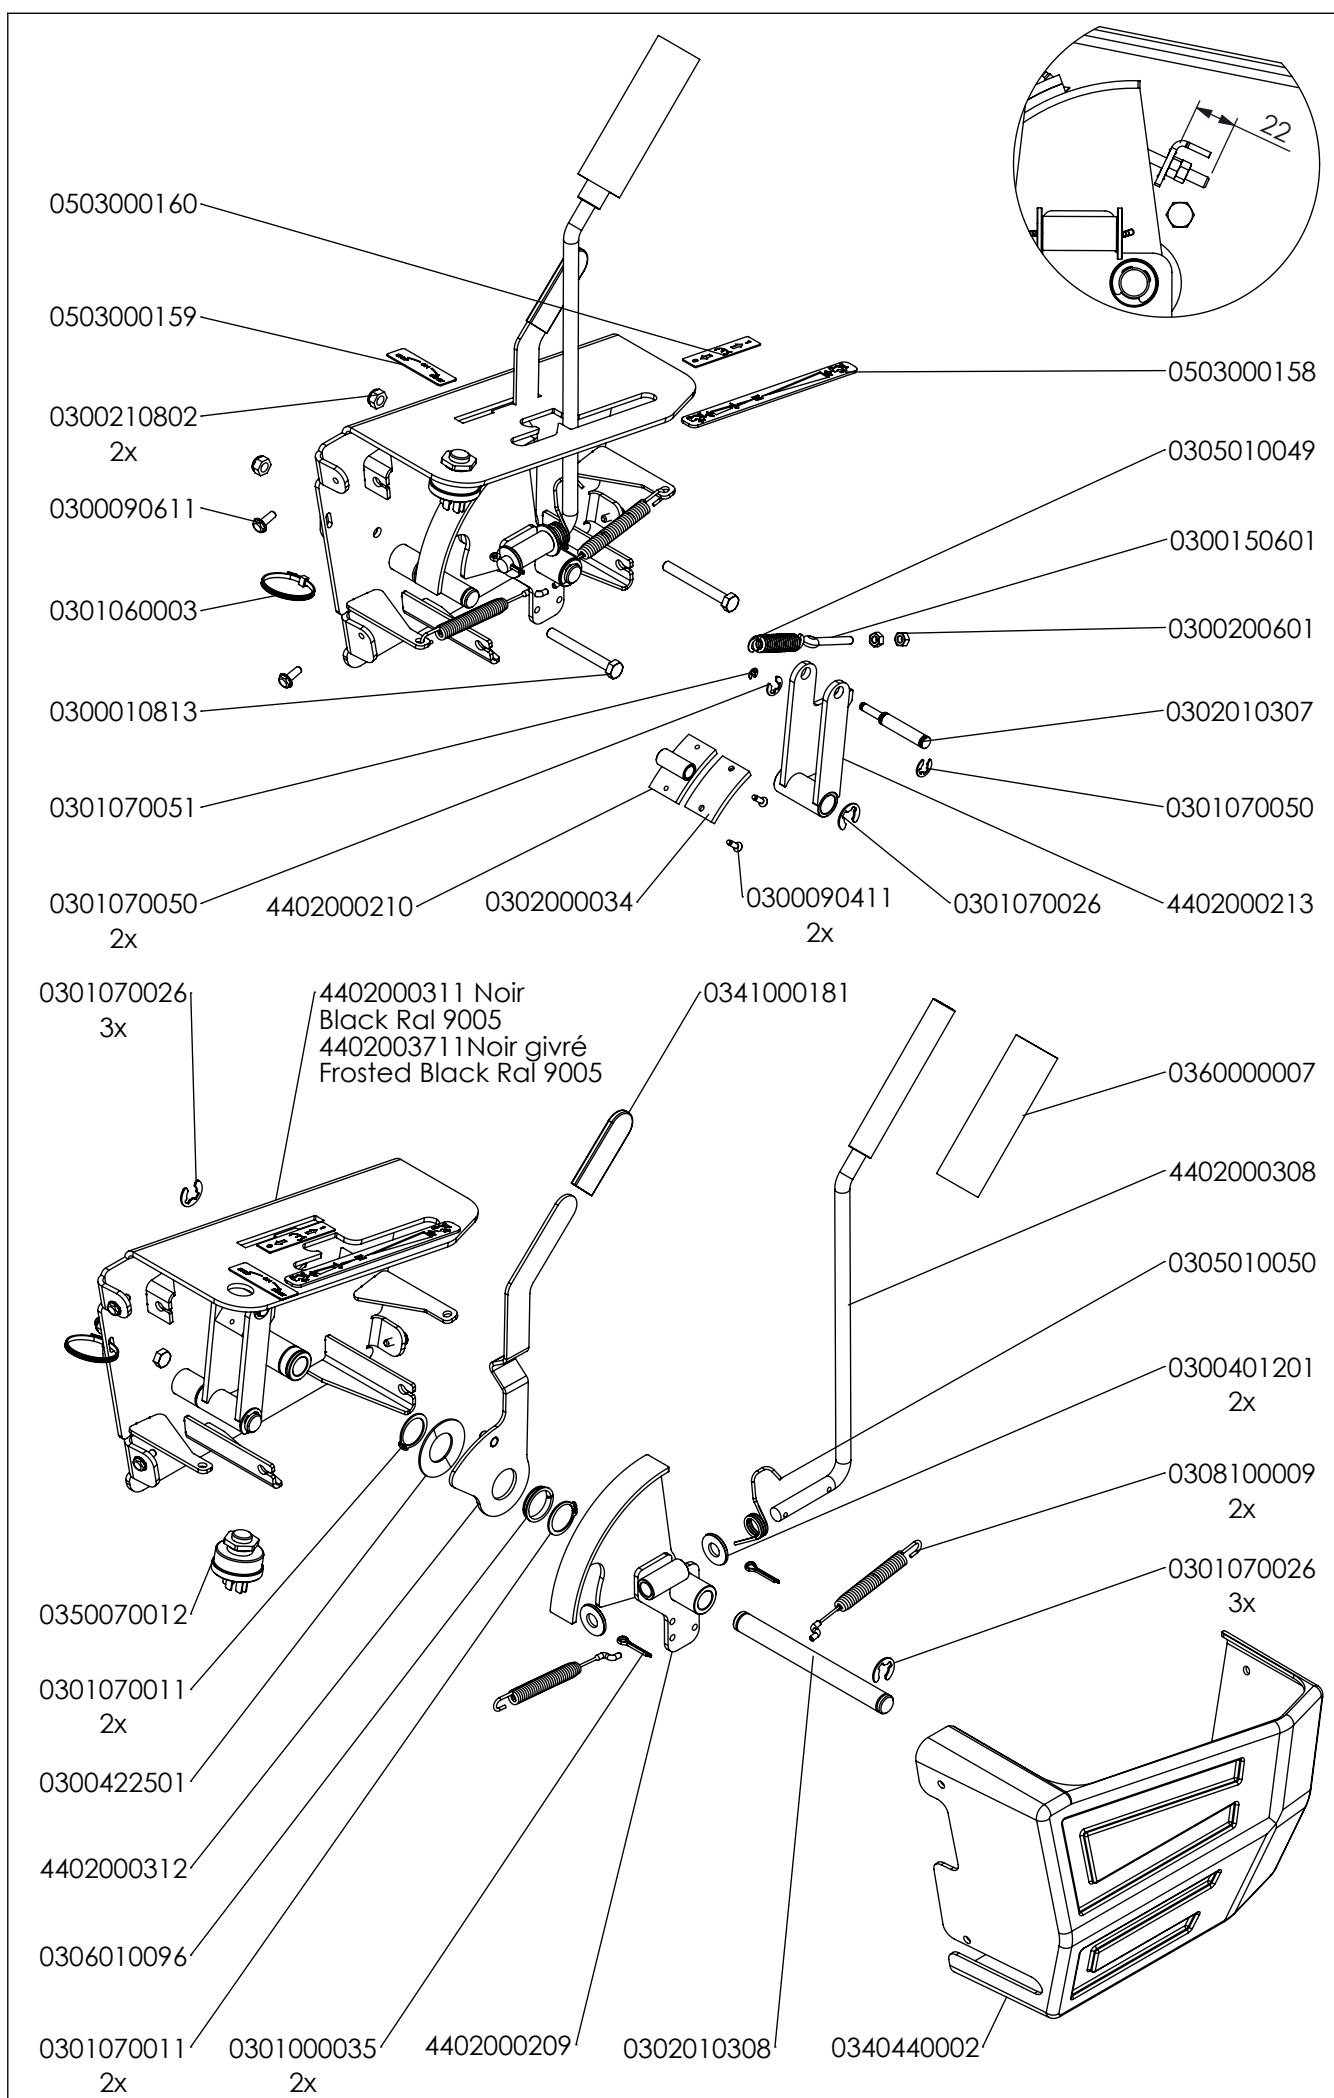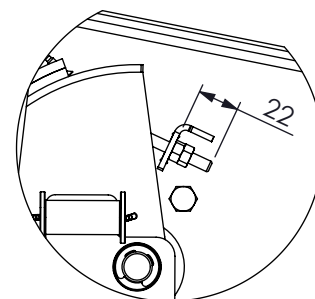

4402000314 Noir / Black Ral 9005
 4402001314 Rouge / Red Ral 3001
 4402003914 Jaune / Yellow Ral 1021
 4402006414 Rouge / Red Ral 3003

0300090815
 3X



4402000316

0300211001
 7X

0503000165

0300090807
 6X

0300211001
 7X

0300011039
 3X

4402000323
 2X

4402040302

0304001117
 2X

0341000182



0503000006
 2X

0300211001
 7X

0300210602
 12X

0300210602
 12X

0341000183


4402040301 Noir
 Black Ral 9005
 4402043701 Noir givré
 Frosted Black Ral 9005
 4402041301 Rouge
 Red Ral 3001


0300010609
 9X


0300011012
 6X


0300010609
 9X


4402000322

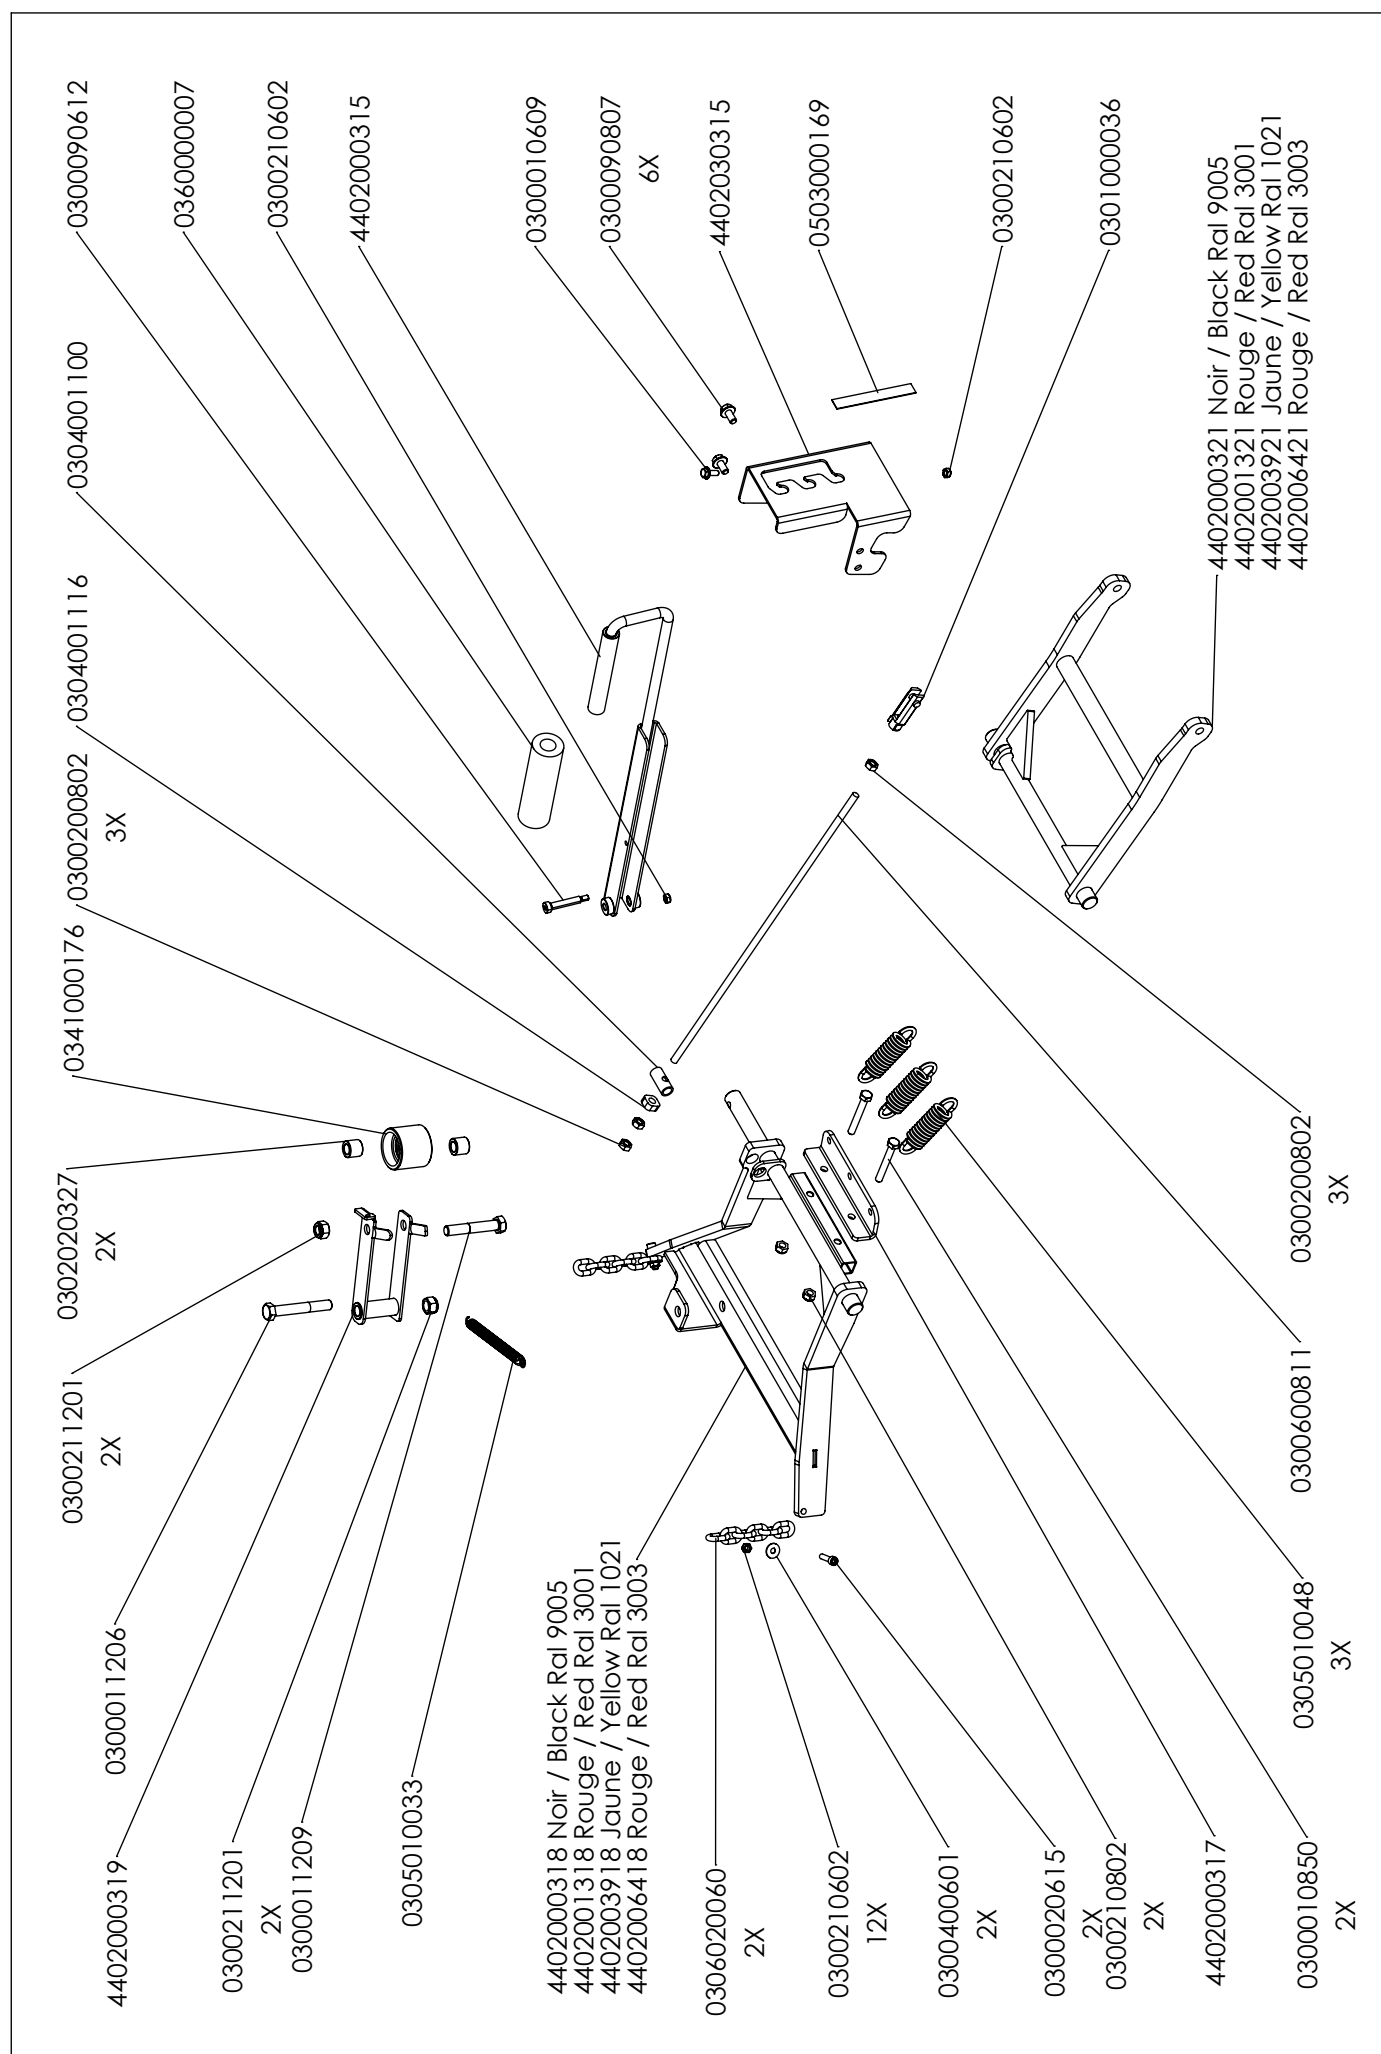

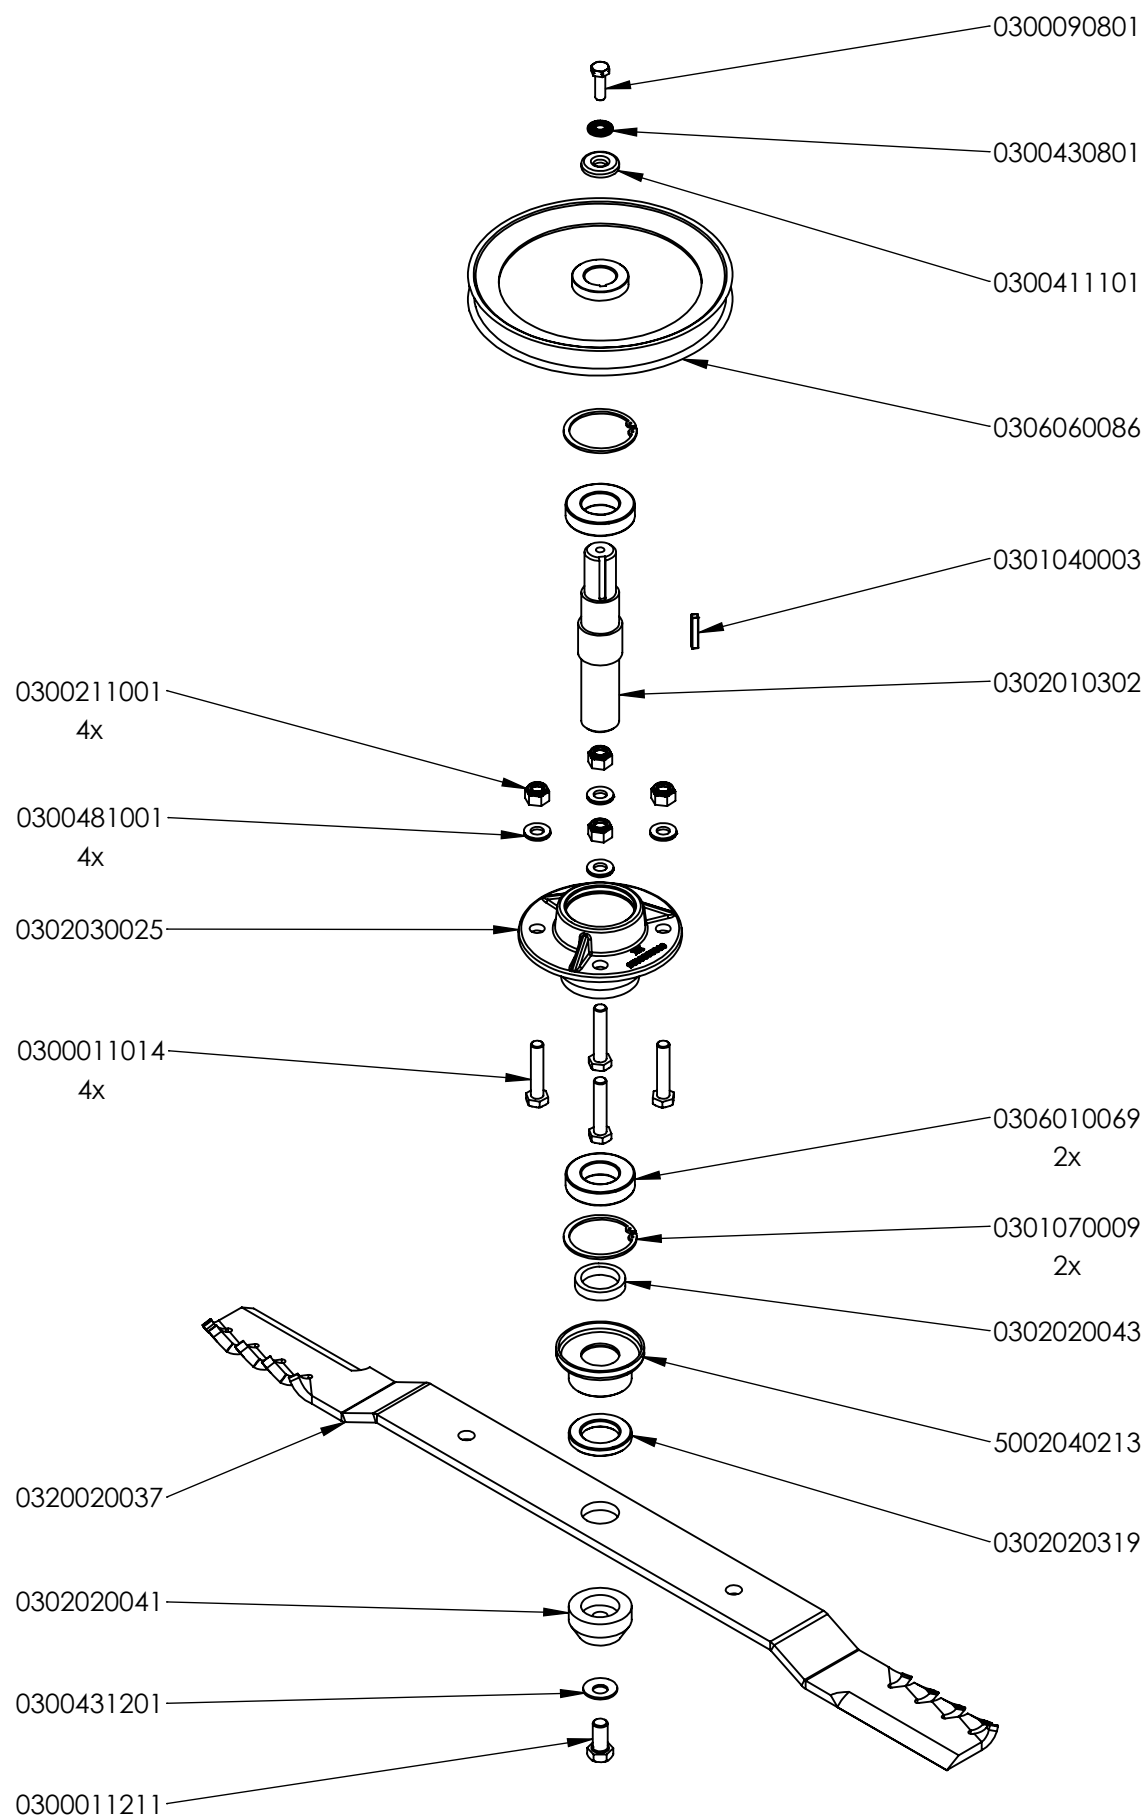

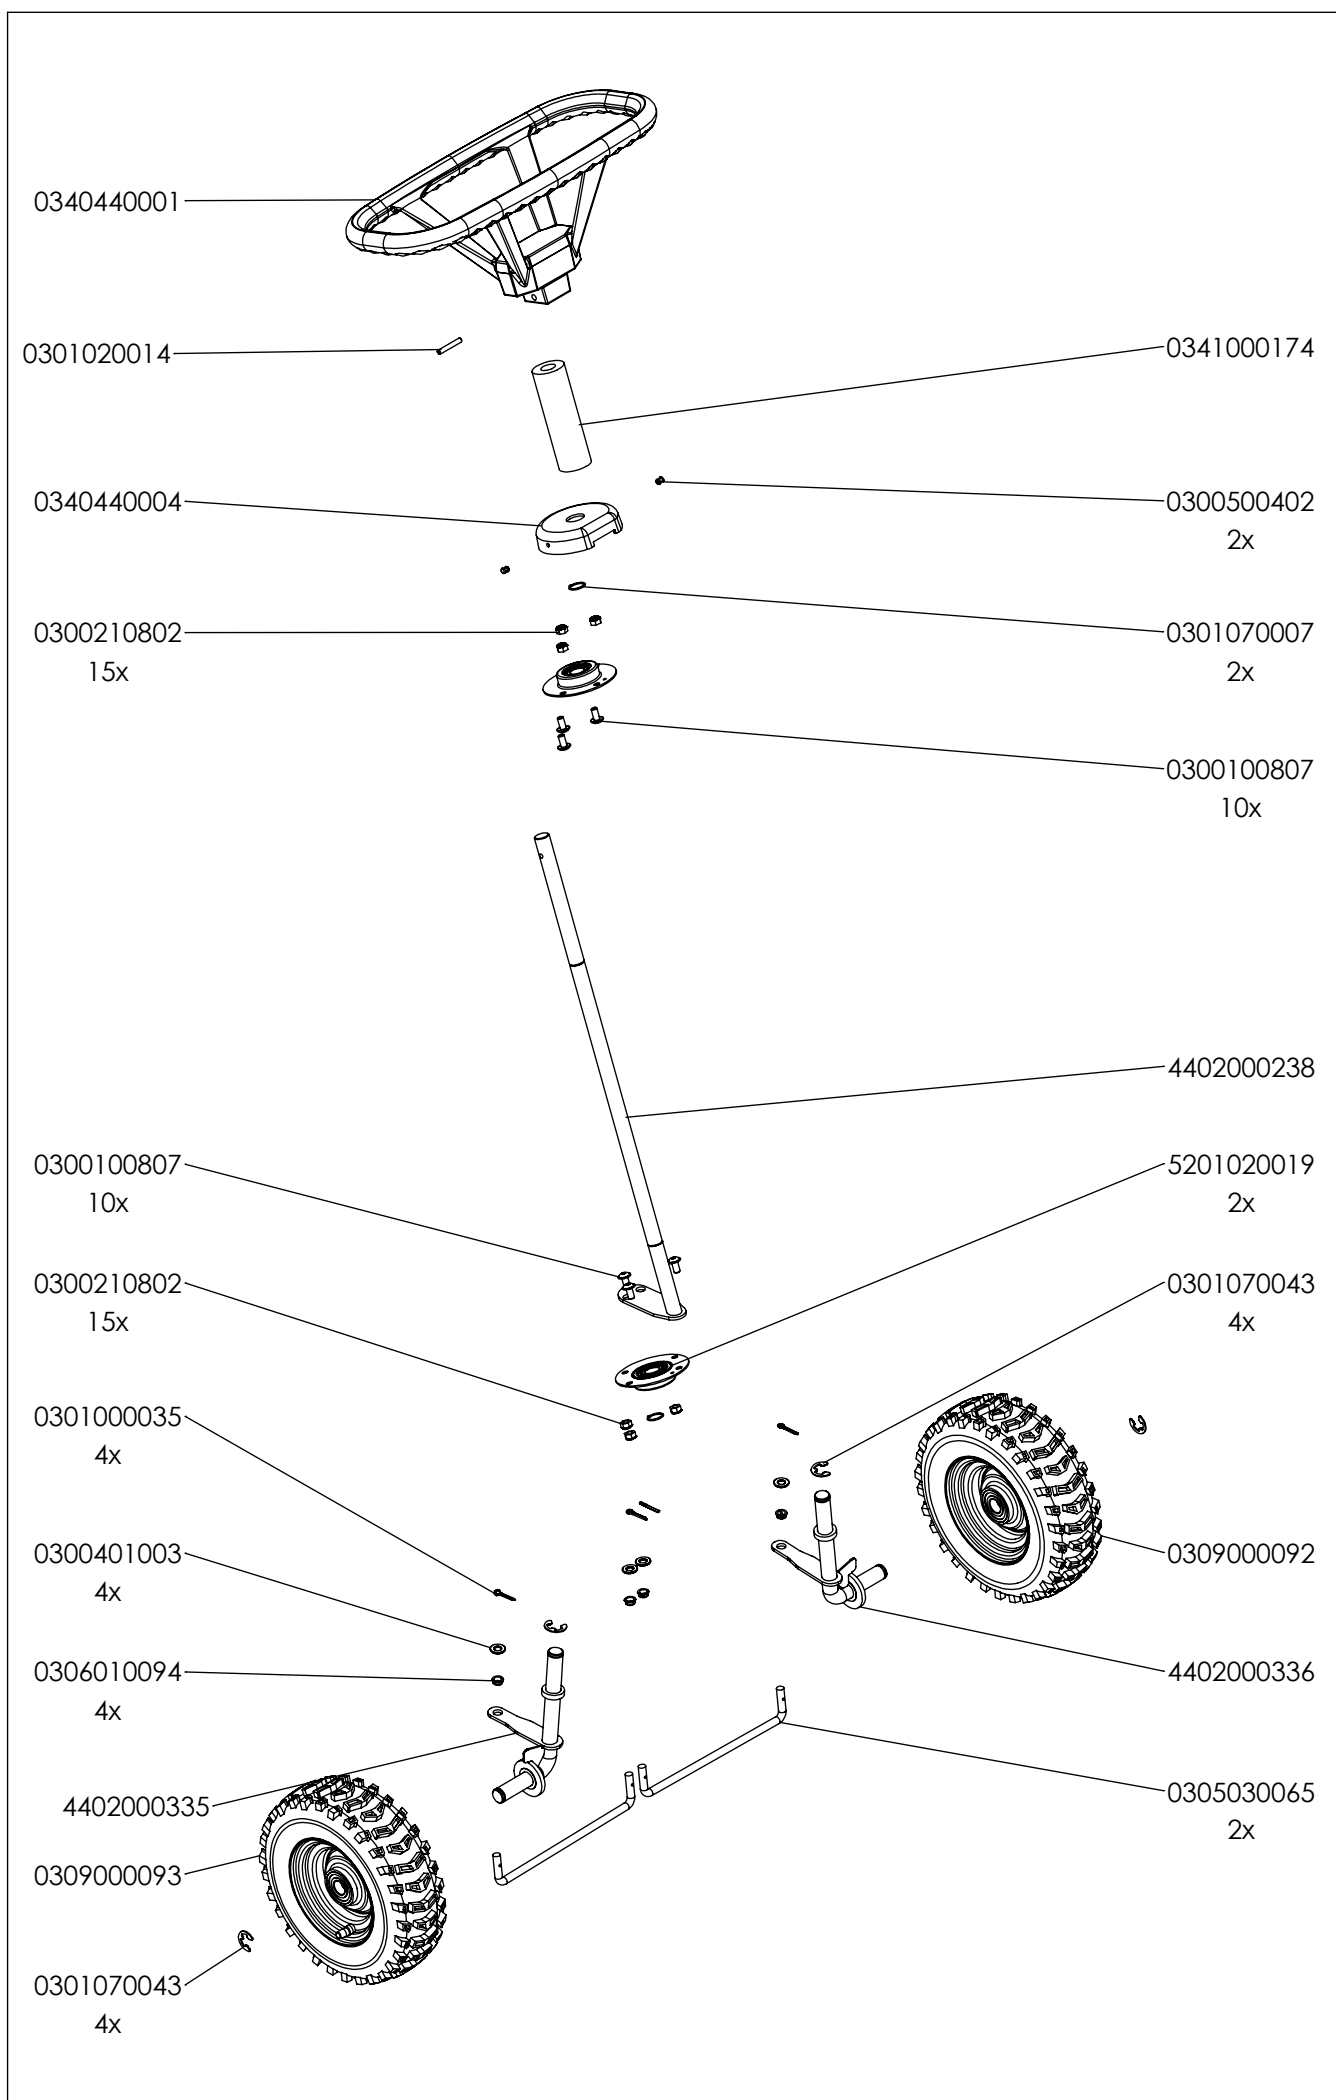

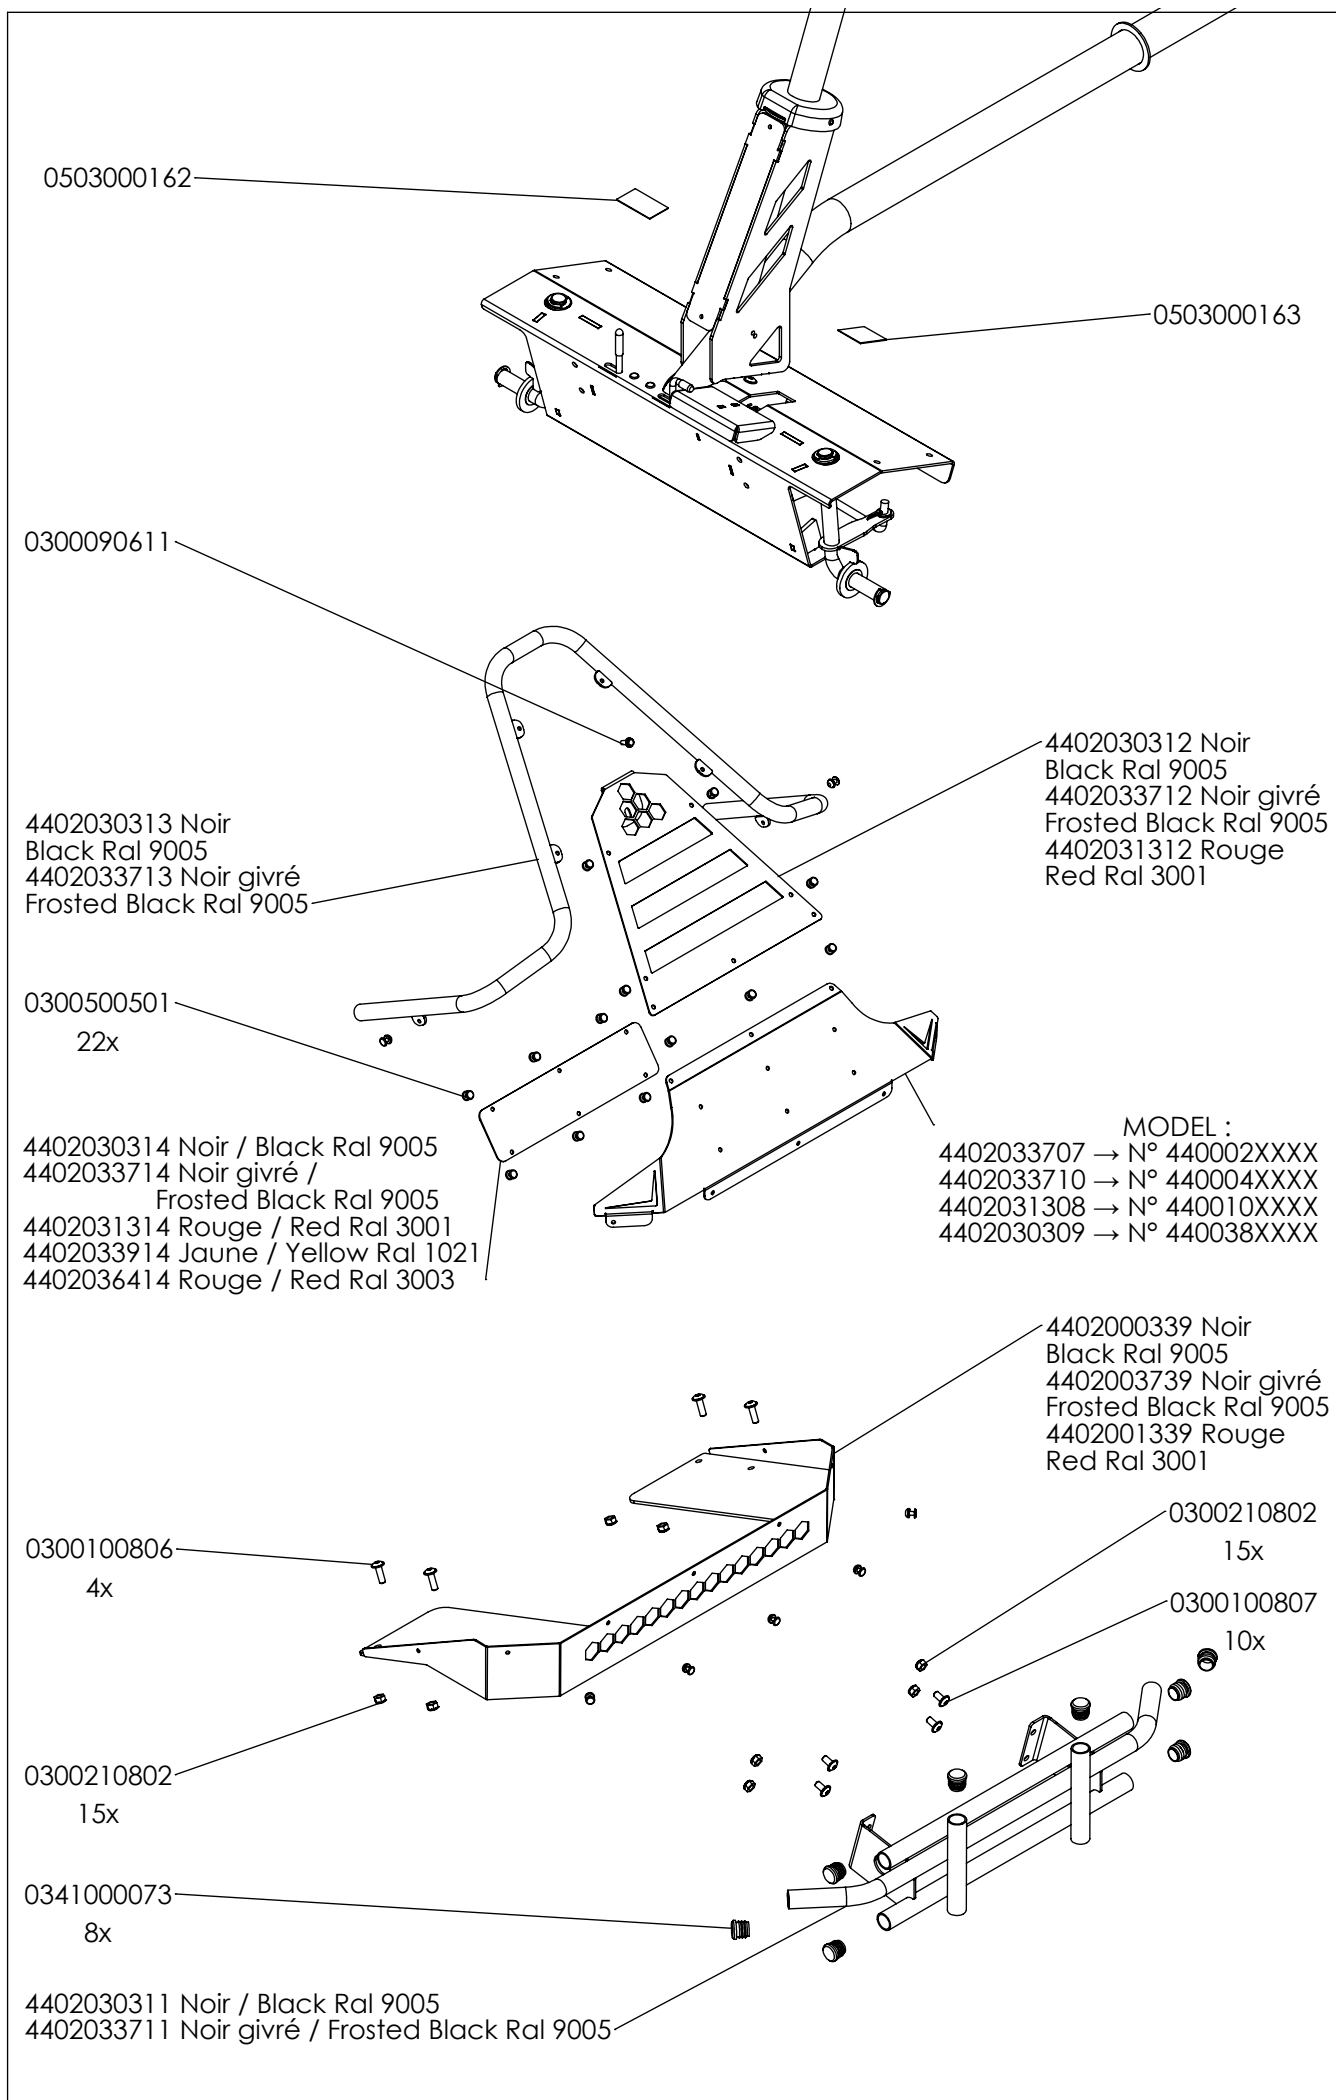

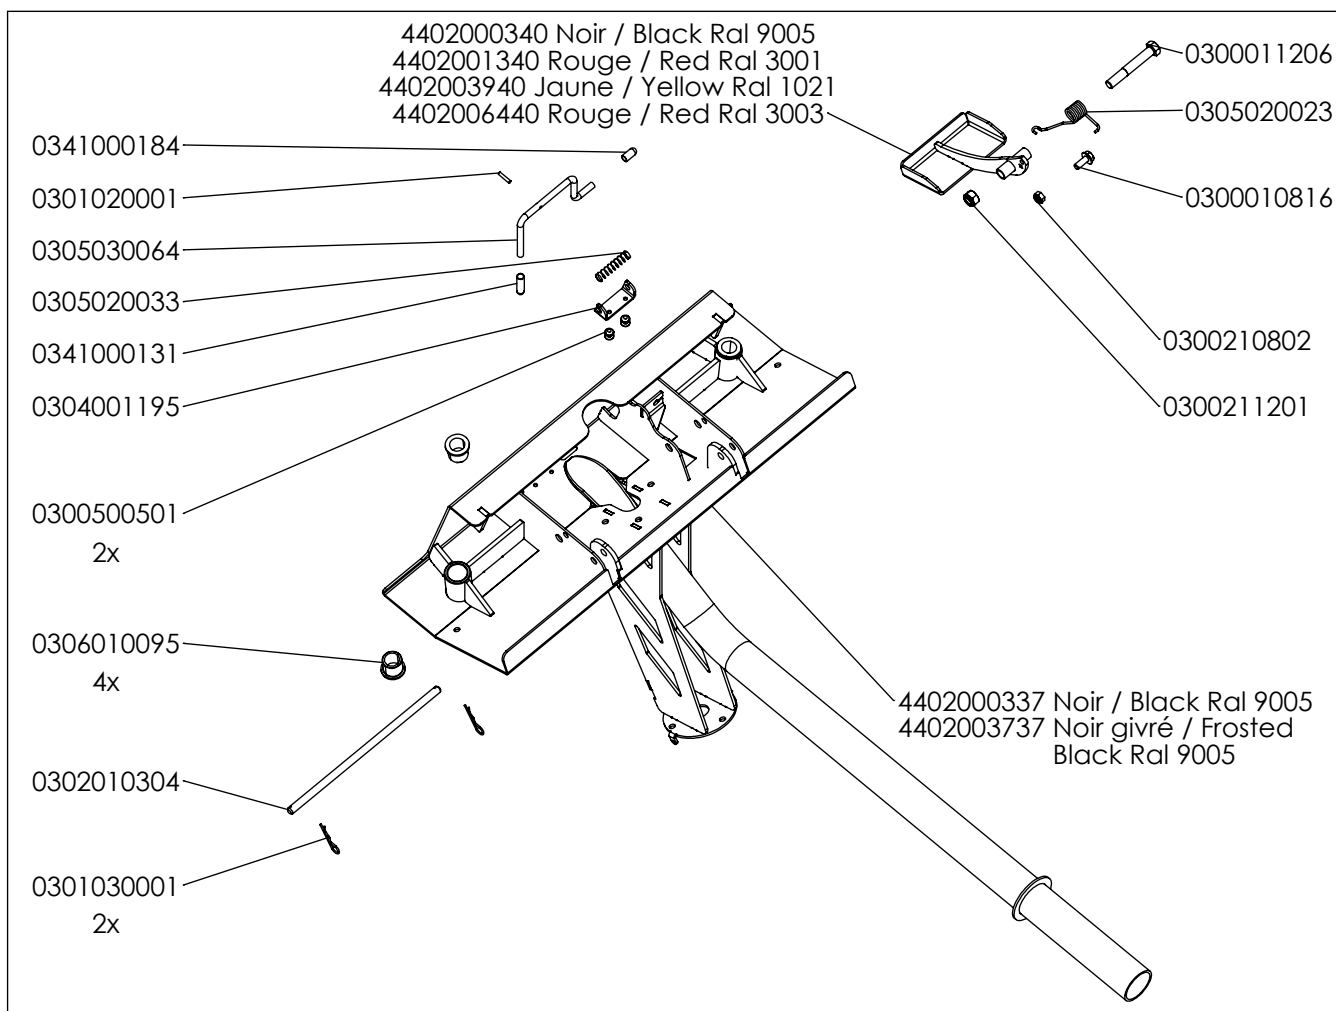

ELECTRICAL DIAGRAM

